



used for over 15 years
to waterproof balconies,
terraces, swimming pools, basins


For over **fifteen years**, we have
successfully **waterproofed** and **protected**
more than **60,000,000 m²** of surfaces,
thanks to the **simple application** procedure
and the **reliability of the system**,
used every day by **thousands**
of professional users **all over the world**.



HOW TO USE



Application
by trowel

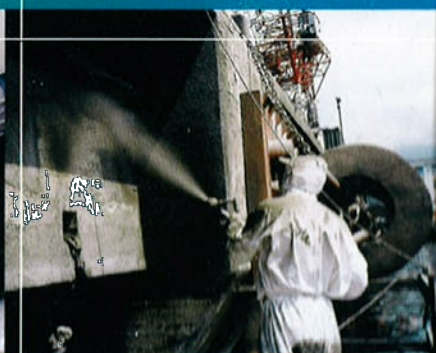

Application
by spraying

The surface to which **Mapelastik** is to be applied must be perfectly sound, clean, free of oil and grease and wetted beforehand with water. After mixing **Mapelastik** (component A+B), spread the product with a flat-bladed trowel or, as an alternative, spray it on with suitable spraying equipment, for a thickness of at least 2 mm for each coat. If the product is to be applied on surfaces which are particularly stressed or cracked, it will be necessary to insert **Fibreglass Mesh** in the first coat while it is still "fresh". As an alternative, **Mapelastik** may be strengthened using **Mapetex Sel**, non-woven, pre-holed polypropylene fabric to improve both ultimate elongation and crack-bridging. After applying **Mapelastik**, wait at least 5 days to cure the product (under ideal conditions) before laying any kind of covering or before decorating with paint.

